

# RT8 tillsammans med Bewator Entro eller Bewator 2010 Omnis

## Inkopplingsanvisning

Illustration 1


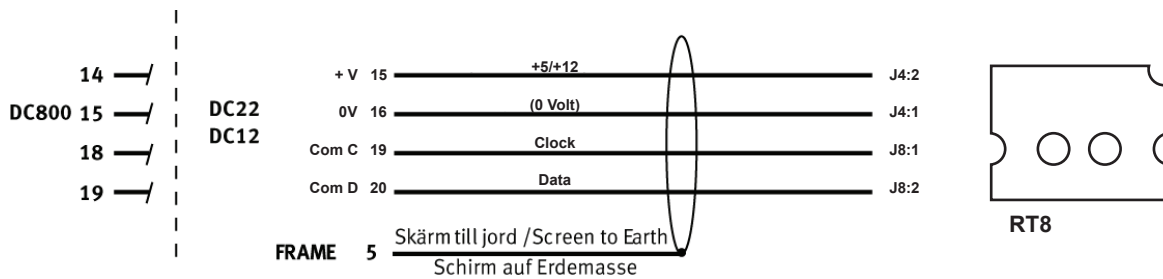


Illustration 2

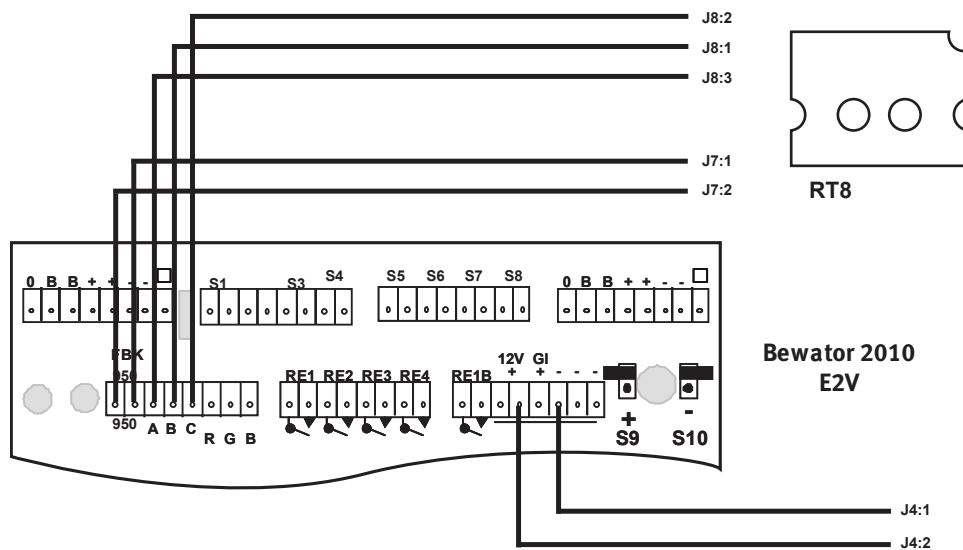

**SIEMENS**